


Mitsubishi Electric domestic and commercial with KNX, Serial and IP support

IN770MIT00XO040 GATEWAY

USER MANUAL

Version 1.0.1

Publication date 2023-12-14

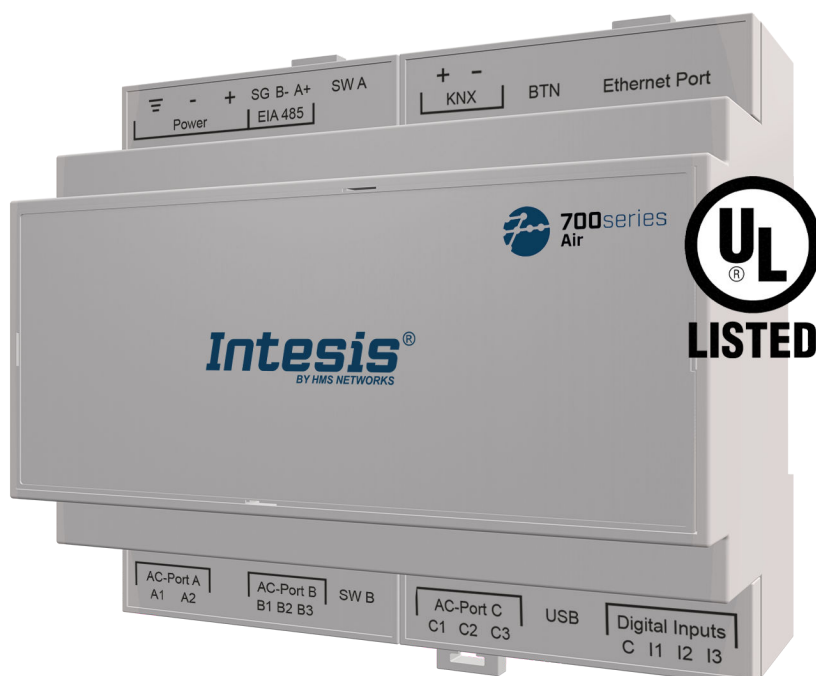

Copyright © 2023 Intesis

Disclaimer

The information in this document is for informational purposes only. Please inform HMS Networks of any inaccuracies or omissions found in this document. HMS Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Networks and is subject to change without notice. HMS Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

Table of Contents

1. Description and Order Codes	1
2. Licensing	2
3. General Information	3
3.1. Intended Use of the User Manual	3
3.2. General Safety Information	3
3.3. Admonition Messages and Symbols	3
4. Overview	5
4.1. Inside the Package	6
4.2. Main Features	6
4.3. Gateway General Functionality	7
5. Hardware	8
5.1. About Mitsubishi Electric Centralized Controller for M-Net	8
5.2. Mounting	8
5.3. Connection	10
5.3.1. Gateway Connectors	10
5.3.2. Connection Procedure for the AC Unit	12
5.3.3. Connection Procedure for Modbus	12
5.3.4. Connection Procedure for KNX	13
5.3.5. Connection Procedure for Home Automation	13
5.3.6. Connection to a PC for Configuration	14
5.4. Gateway Layout	15
5.5. LED Indicators	16
5.6. DIP Switches	16
5.7. Push Button	17
5.8. Technical Specifications	18
5.9. Dimensions	19
6. Available Applications	20
6.1. Integration into Modbus Systems	20
6.1.1. Modbus Registers	20
6.2. Integration into KNX Systems	24
6.2.1. KNX signals	24
6.3. Integration into Home Automation Systems	32
6.3.1. Home Automation Signals	32
7. Late Configuration: Change the Gateway's Protocol	33
8. Error Codes	34

1. Description and Order Codes

IN770MIT00xO040 Gateway.

Modbus®, KNX®, and Home Automation® gateway for Mitsubishi Electric® air conditioning systems.

ORDER CODE	LEGACY ORDER CODE
IN770MIT00xO040	-
¹ The x stands for S or M, depending on the license you have purchased. To know more, see Licensing (page 2) .	



NOTE
The order code may vary depending on the product seller and the buyer's location.

2. Licensing

Distribution license(s) for the IN770MIT00xO040 gateway:

Order Code	License	Maximum groups
IN770MIT00SO040	Small	50
IN770MIT00MO040	Medium	100



NOTE

The order code may vary depending on the product seller and the buyer's location.

3. General Information

3.1. Intended Use of the User Manual

This manual contains the main features of this Intesis gateway and the instructions for its appropriate installation, configuration, and operation.

The contents of this manual should be brought to the attention of any person who installs, configures, or operates this gateway or any associated equipment.

Keep this manual for future reference during the installation, configuration, and operation.

3.2. General Safety Information

**IMPORTANT**

Follow these instructions carefully. Improper work may seriously harm your health and damage the gateway and/or any other equipment connected to it.

Only technical personnel, following these instructions and the country legislation for installing electrical equipment, can install and manipulate this gateway.

Install this gateway indoors, in a restricted access location, avoiding exposure to direct solar radiation, water, high relative humidity, or dust.

All wires (for communication and power supply, if needed) must only be connected to networks with indoor wiring. All communication ports are considered for indoor use and must only be connected to SELV circuits.

Disconnect all systems from power before manipulating and connecting them to the gateway.

Use SELV-rated NEC class 2 or limited power source (LPS) power supply.

Use a circuit breaker before the power supply. Rating: 250 V, 6 A.

Supply always a correct voltage to power the gateway. See [Technical Specifications \(page 18\)](#).

Respect the expected polarity of power and communication cables when connecting them to the gateway.

3.3. Admonition Messages and Symbols

**DANGER**

Instructions that must be followed to avoid an imminently hazardous situation that, if not avoided, will result in death or severe injury.

**WARNING**

Instructions that must be followed to avoid a potentially hazardous situation that, if not avoided, could result in death or severe injury.

**CAUTION**

Instruction that must be followed to avoid a potentially hazardous situation that, if not avoided, could result in minor or moderate injury.



IMPORTANT

Instruction that must be followed to avoid a risk of reduced functionality and/or damage to the equipment or to avoid a network security risk.



NOTE

Additional information which may facilitate installation and/or operation.



TIP

Helpful advice and suggestions.



NOTICE

Remarkable Information.

4. Overview

This IN770MIT00x0040 gateway supports three applications.

Gateway's client interface	↔	Gateway's server interface
Mitsubishi Electric City Multi systems	to	Modbus TCP and RTU
		KNX TP
		Home Automation

**IMPORTANT**
This document assumes that the user is familiar with these technologies.

Figure 1. Integration of Mitsubishi Electric AC systems into Modbus installations

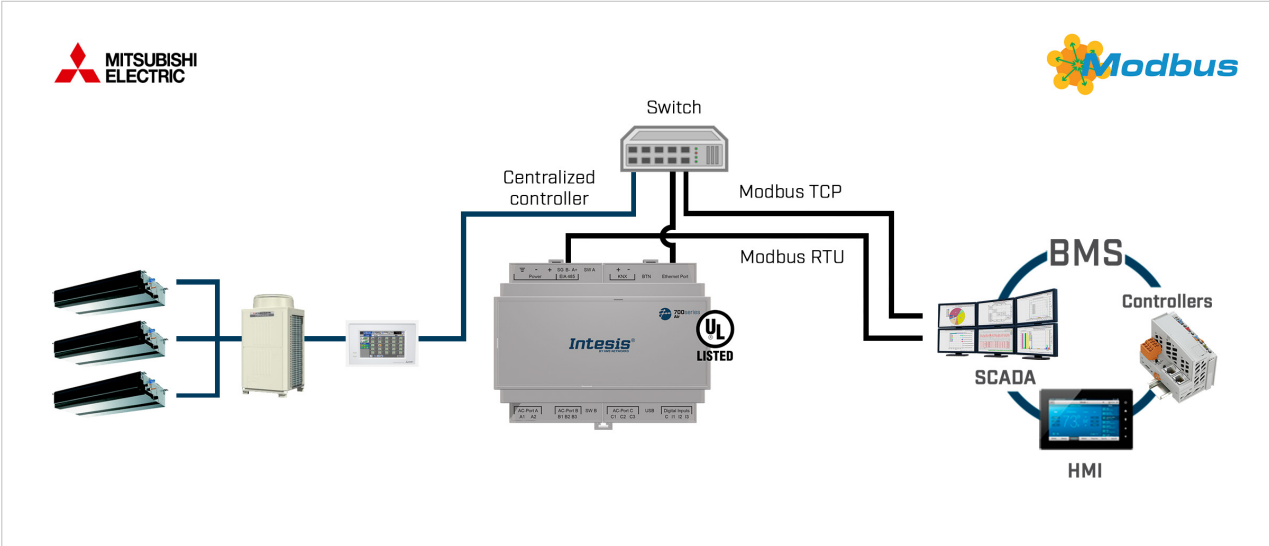


Figure 2. Integration of Mitsubishi Electric AC systems into KNX installations


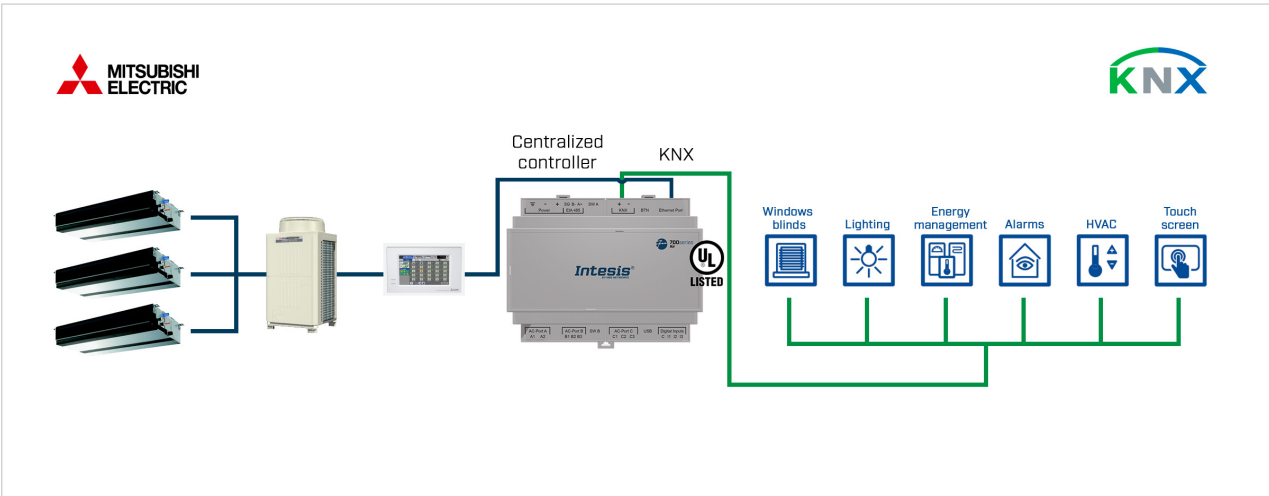


Figure 3. Integration of Mitsubishi Electric AC systems into Home Automation installations

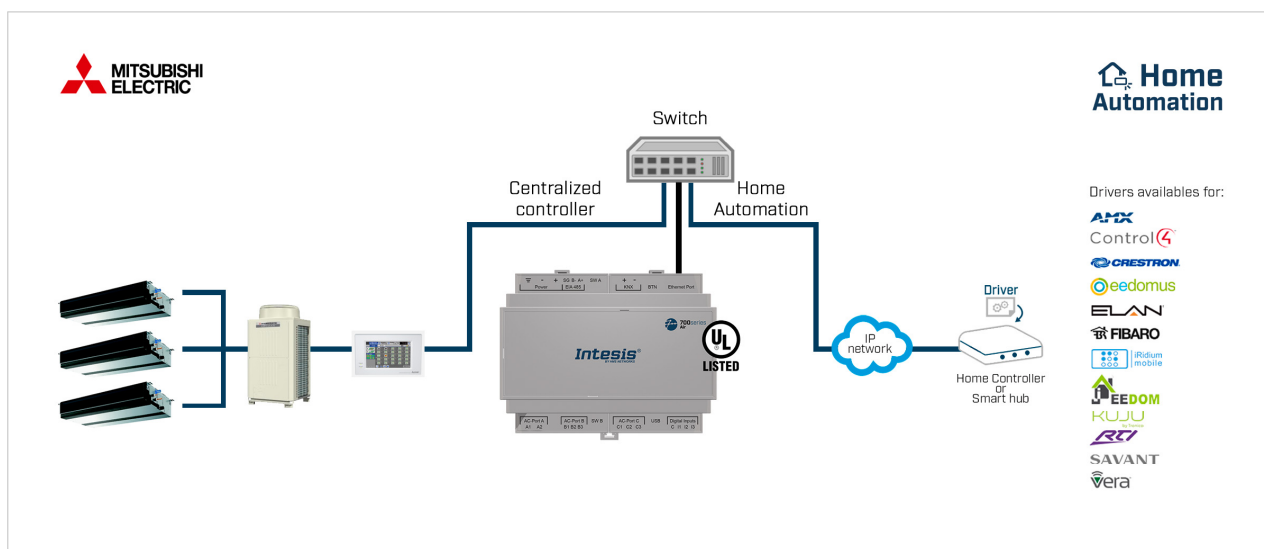

4.1. Inside the Package

Items included:

- Intesis IN770MIT00xO040 Gateway
- USB Mini-B type to USB Type-A cable
- Installation Sheet

4.2. Main Features

- Several applications available: Configurable for Modbus TCP and RTU, KNX, and Home Automation communication protocols.
- Late configuration: Change between applications easily.
- Scan function: Find the devices connected to the air conditioning bus.
- Specific signals to monitor outdoor units.
- 2 x DIP switches for the EIA-485 connector termination and polarization configuration.
- 14 LEDs indicate the operating status for both the gateway and the communication bus.
- DIN rail and wall mounting case.
- Accredited with the main certifications for electronic equipment.
- Multiple ports for serial and TCP/IP communication:
 - Green pluggable terminal block for EIA-485 (3 poles)
 - Orange pluggable terminal block for KNX (2 poles)
 - Ethernet
 - Green pluggable terminal block for binary inputs (4 poles)
 - USB Mini-B type 2.0 port for connection to the PC
 - Green pluggable terminal block for AC connection (2 poles)
 - Green pluggable terminal block for AC connection (3 poles)
 - Green pluggable terminal block for AC connection (3 poles)

**NOTE**

Depending on the AC bus, some of these AC connection ports are not used. See [Gateway Connectors \(page 10\)](#).

4.3. Gateway General Functionality

With this Intesis IN770MIT00xO040 gateway, you can easily integrate Mitsubishi Electric City Multi systems into an installation based on Modbus TCP, Modbus RTU, KNX, or Home Automation. To do so, the gateway acts as a server device of the installation itself, accessing all signals from each air conditioner unit and controlling the whole AC network.

The gateway is continuously polling the AC network, storing in its memory the current status of every signal you want to track and serving this data to the installation when requested. Also, when a signal status changes, the gateway sends a write telegram to the installation, waits for the response, and performs the corresponding action.

A lack of response from a signal activates a communication error, allowing you to know which signal from which AC unit is not correctly working.

5. Hardware

5.1. About Mitsubishi Electric Centralized Controller for M-Net

This integration requires the Mitsubishi Electric City Multi AC system to be equipped with a Mitsubishi Electric Centralized Controller for M-Net. This Centralized Controller offers the signals of the City Multi AC system through XML protocol to its Ethernet port, which is accessed by the Intesis IN770MIT00xO040 gateway.



IMPORTANT

Most Mitsubishi Electric Centralized Controllers require a PC-Monitoring (SW-Mon) software license, which must be purchased together with the centralized controller for the XML interface to be active and used by the Intesis gateway.



IMPORTANT

List of compatible centralized controllers:

- G-50
- G-50A
- GB-50A
- GB-50ADA
- AB-150
- AE-200
- AE-50
- AG-150A
- EW-50
- EB-50GU

5.2. Mounting



IMPORTANT

Before mounting, please ensure that the chosen installation place preserves the gateway from direct solar radiation, water, high relative humidity, or dust.



IMPORTANT

Maximum mounting height: below 2 meters (6.5 feet).



NOTE

Mount the gateway on a wall or over a DIN rail. We recommend the DIN rail mounting option, preferably inside a grounded metallic industrial cabinet.




IMPORTANT

Ensure the gateway has sufficient clearances for all connections when mounted. See [Dimensions \(page 19\)](#).

Wall mounting

1. Press the top side mobile clips in the rear panel until you hear a *click*.

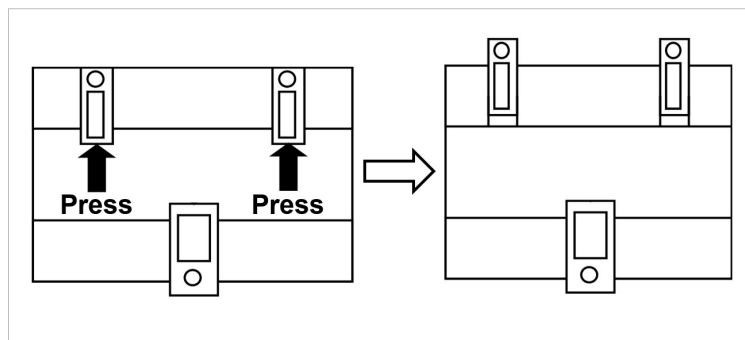

2. Use the clip holes to fix the gateway on the wall using screws.



NOTE

Use M3 screws, 25 mm (1") length.

3. Make sure the gateway is firmly fixed.


DIN rail mounting

1. Fit the gateway's top-side clips in the upper edge of the DIN rail.
2. Press the low side of the gateway gently to lock it in the DIN rail.
3. Make sure the gateway is firmly fixed.



NOTE

For some DIN rails, to complete step 2, you may need a small screwdriver or similar to pull the bottom clip down.

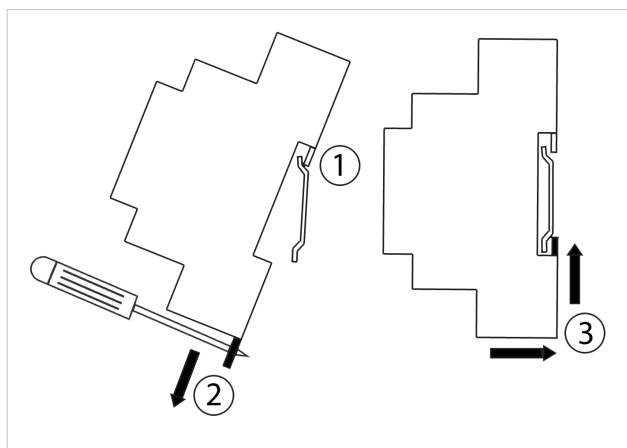

5.3. Connection



CAUTION

Disconnect all systems from power before manipulating and connecting them to the gateway.




IMPORTANT

Keep communication cables away from power and ground wires.

5.3.1. Gateway Connectors

Figure 4. Wiring diagram

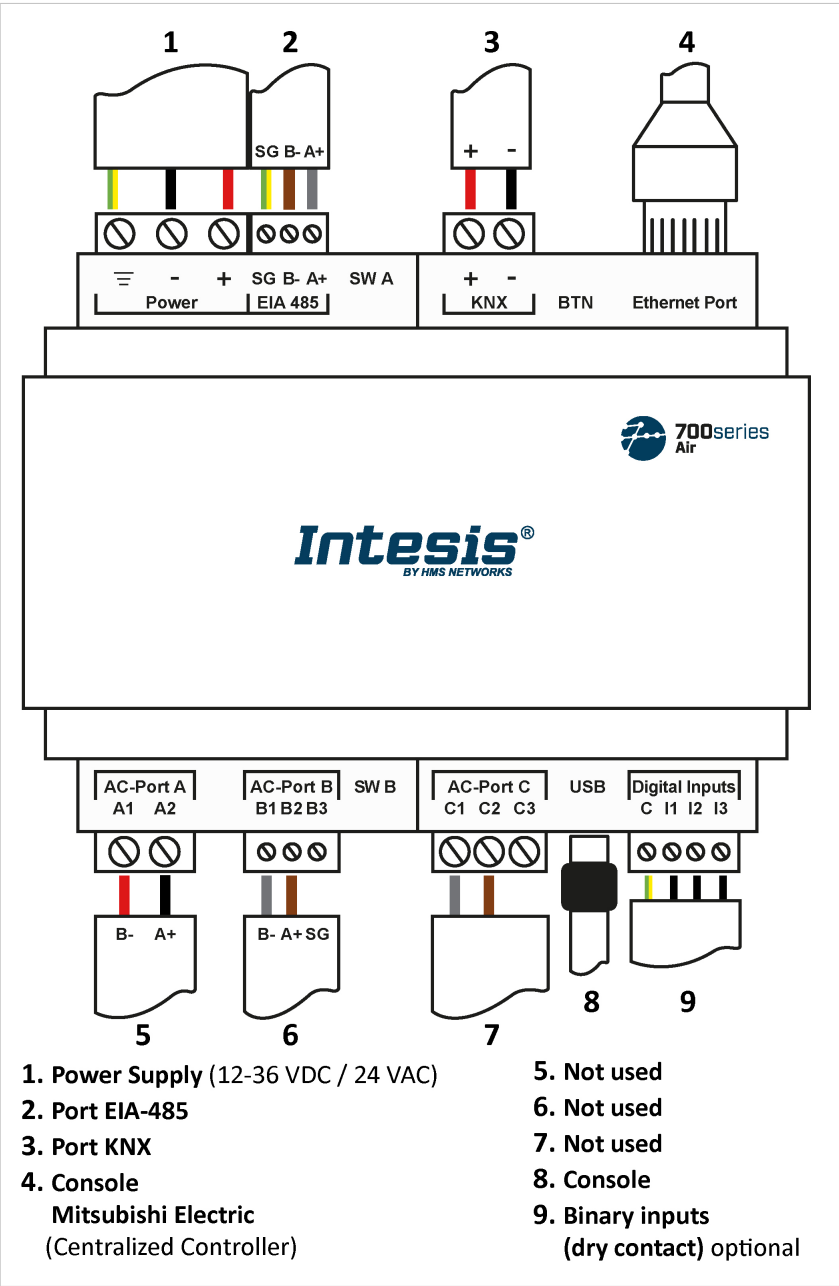

Connectors' wiring:**IMPORTANT**

For all connectors, use solid or stranded wires (twisted or with ferrule).

Cross-section/gauge per terminal:

- One core: 0.2 .. 2.5 mm² / 24 .. 11 AWG
- Two cores: 0.2 .. 1.5 mm² / 24 .. 15 AWG
- Three cores: Not permitted

**NOTE**

To know more about each port's specifications, see [Technical Specifications \(page 18\)](#).

**NOTE**

Mount the gateway in the desired installation site before wiring.

Communication ports:

PORT	USAGE	WIRING			
EIA-485	Modbus RTU	SG: Signal ground	B-	A+	
KNX	KNX bus	+		-	
Ethernet	Connection to the Centralized Controller	Ethernet cable (CAT5 or higher) When using the building LAN, contact the network administrator and make sure traffic is allowed. When starting up the gateway for the first time, DHCP will be enabled for 30 seconds. After that time, the default IP 192.168.100.246 will be set.			
AC-Port A	Not used				
AC-Port B	Not used				
AC-Port C	Not used				
USB	Connection to a PC for configuration purposes	USB Mini-B type			
Digital Inputs	Dry contact for input devices	C: Common	I1: Input 1	I2: Input 2	I3:Input3

Power supply:

The power supply connector is a green pluggable terminal block (three poles) labeled as **Power**.

Apply the voltage within the admitted range and of enough power:

- **For DC:** 12 .. 36 VDC (+/-10%), Max: 250 mA
- **For AC:** 24 VAC (+/-10 %), 50-60 Hz, Max: 127 mA

**IMPORTANT**

- **When using a DC power supply:** Respect the polarity labeled on the power connector for the positive and negative wires.
- **When using an AC power supply:** Ensure the same power supply is not powering any other device.



IMPORTANT

- Use SELV-rated NEC class 2 or limited power source (LPS) power supply.
- Respect the polarity.
- Connect the gateway's ground terminal  to the installation grounding.
- A wrong connection may cause earth loops and damage the Intesis gateway and/or other system equipment.

5.3.2. Connection Procedure for the AC Unit

Connect the Mitsubishi Electric central control network to the gateway using the **Ethernet Port**.



IMPORTANT

If communicating through the LAN of the building, contact the network administrator and make sure traffic on the used port is allowed through all LAN paths.



NOTE

When commissioning the gateway for the first time, DHCP will be enabled for 30 seconds. During that time, if there is a DHCP server, an IP address will be automatically assigned to the gateway. If there is no DHCP, you can type an IP address of your choice. After that time, the default IP address 192.168.100.246 will be automatically set.



NOTE

See the [Wiring diagram \(page 10\)](#).

5.3.3. Connection Procedure for Modbus

For Modbus TCP:

Connect the Modbus TCP Ethernet cable to the gateway's **Ethernet Port**. The correct cable to use depends on where the gateway is connected:

- **Connecting directly to a Modbus TCP device:** use a crossover Ethernet UTP/FTP CAT5 or higher cable.
- **Connecting to a hub or switch of the LAN of the building:** use a straight Ethernet UTP/FTP CAT5 or higher cable.



NOTE

Some devices detect the difference automatically and adjust themselves.



NOTE

When commissioning the gateway for the first time, DHCP will be enabled for 30 seconds. During that time, if there is a DHCP server, an IP address will be automatically assigned to the gateway. If there is no DHCP, you can type an IP address of your choice. After that time, the default IP address 192.168.100.246 will be automatically set.



IMPORTANT

If communicating through the LAN of the building, contact the network administrator and make sure traffic on the used port is allowed through all LAN paths.

For Modbus RTU:

Connect the Modbus RTU communication cable to the gateway's **EIA-485** port.

The connector for the EIA-485 bus is a green pluggable terminal block labeled **SG** (signal ground), **B-**, and **A+**.

**IMPORTANT**

Observe polarity.

**IMPORTANT**

Remember the characteristics of the standard EIA-485 bus:

- Maximum distance of 1200 meters (0.75 miles).
- Maximum of 32 devices connected to the bus.
- A 120 ohms (Ω) termination resistor is needed at each end of the bus. The gateway has an internal bus biasing circuit already incorporating the termination resistor. It can be enabled using the DIP switch block (**SW A**) dedicated to the **EIA-485** port:

Position 1

- ON: 120 Ω termination active.
- OFF: 120 Ω termination inactive.

Positions 2 and 3

- ON: Polarization active.
- OFF: Polarization inactive.

For further details, see [DIP Switches \(page 16\)](#).

**IMPORTANT**

When installing the gateway at the end of the bus with the termination resistor enabled, do not install an additional termination resistor at that end.

**NOTE**

See the [Wiring diagram \(page 10\)](#).

5.3.4. Connection Procedure for KNX

Connect the KNX TP communication cable to the gateway's **KNX** port.

**IMPORTANT**

Observe polarity.

**NOTE**

See the [Wiring diagram \(page 10\)](#).

5.3.5. Connection Procedure for Home Automation

Connect the Home Automation Ethernet cable to the gateway's **Ethernet Port**. The correct cable to use depends on where the gateway is connected:

- **Connecting directly to a Home Automation device:** use a crossover Ethernet UTP/FTP CAT5 or higher cable.
- **Connecting to a hub or switch of the LAN of the building:** use a straight Ethernet UTP/FTP CAT5 or higher cable.



NOTE

When commissioning the gateway for the first time, DHCP will be enabled for 30 seconds. During that time, if there is a DHCP server, an IP address will be automatically assigned to the gateway. If there is no DHCP, you can type an IP address of your choice. After that time, the default IP address 192.168.100.246 will be automatically set.



IMPORTANT

If communicating through the LAN of the building, contact the network administrator and make sure traffic on the used port is allowed through all LAN paths.



NOTE

See the [Wiring diagram \(page 10\)](#).

5.3.6. Connection to a PC for Configuration

Use the supplied USB Mini-B type to USB Type-A cable to connect the gateway through its **Console** port to a PC to configure it with Intesis MAPS.



NOTE

You can use the **Ethernet Port** to connect the gateway and the PC instead.



NOTE

Find all you need to know about the gateway configuration and Intesis MAPS in the Intesis MAPS Configuration Guide.




NOTE

See the [Wiring diagram \(page 10\)](#).

5.4. Gateway Layout

Figure 5. Disposition of hardware elements in the gateway

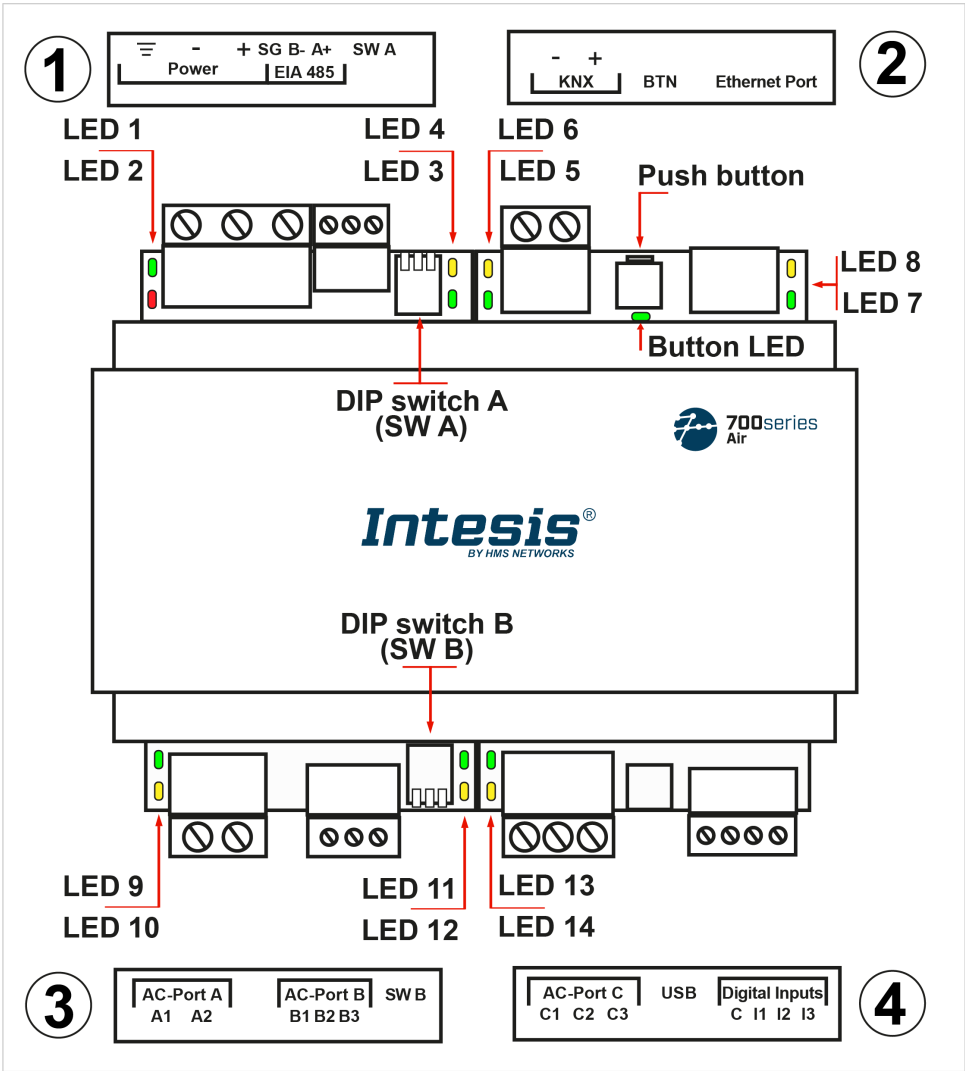

Plastic covers numbered in the image as ①, ②, ③, and ④ can be easily disassembled.

The following sections explain each element in more detail: LEDs, DIP switches, and the push button.

5.5. LED Indicators

Table 1. LEDs location and behavior

Cover	LED	Color	Description
Top side			
Under frontal cover ①	LED 1 (PWR)	Green	Power on (not programmable)
	LED 2 (ERR)	Red	Blinking: Hardware error
	LED 3	Green	485 Tx (RS485 for Modbus)
	LED 4	Yellow	485 Rx (RS485 for Modbus)
Under frontal cover ②	LED 5	Green	KNX Port Tx
	LED 6	Yellow	KNX Port Rx
	BUTTON LED	Green	KNX: Programming mode on Modbus and Home Automation: Not used
	LED 7	Green	Ethernet link established
	LED 8	Yellow	Ethernet speed
Bottom side			
Under frontal cover ③	LED 9	Green	AC-Port A Tx (HBS)
	LED 10	Yellow	AC-Port A Rx (HBS)
	LED 11	Green	AC-Port B Tx (RS485)
	LED 12	Yellow	AC-Port B Rx (RS485)
Under frontal cover ④	LED 13	Green	AC-Port C Tx (UFO-SLQ)
	LED 14	Yellow	AC-Port C Rx (UFO-SLQ)



NOTE

LEDs are hidden behind the four frontal labeled covers (see the figure [Disposition of hardware elements in the gateway \(page 15\)](#)). These covers are assembled by pressure, so you just need to pull them to remove them.

5.6. DIP Switches

The gateway has two DIP switches (see the figure [Disposition of hardware elements in the gateway \(page 15\)](#)):

- DIP switch A (SW A)
- DIP switch B (SW B)

Each DIP switch is dedicated to a 485 port, and its function is to activate or deactivate the termination resistor and the polarization of each port:

Position			Description
1	2	3	
↑	X	X	120 Ω termination active
↓	X	X	120 Ω termination inactive (default position)
X	↑	↑	Polarization active (default position)
X	↓	↓	Polarization inactive

5.7. Push Button

Find the push button at the top side, between the KNX and the Ethernet connectors (see the figure [Disposition of hardware elements in the gateway \(page 15\)](#)).

**NOTE**

The button is hidden and only accessible using a thin object like a paper clip.

Common functionality:

Reset factory settings

1. Push the button.
2. Power on the gateway.
3. Wait four seconds.
4. Release the button.

Functionalities depending on the current project:

KNX

- Push the button to switch between normal mode and programming mode.

5.8. Technical Specifications

Housing	Plastic, type PC (UL 94 V-0). Color: Light Grey. RAL 7035 Net dimensions (dxwxh): Millimeters: 90 x 106 x 58 mm / Inches: 3.5 x 4.2 x 2.3"	
Mounting	Wall: Use M3 25 mm (1") length screws. Secure mounting: below 2 meters (6 feet) DIN rail (recommended mounting) EN60715 TH35	
Wires (for power supply and low-voltage signals)	Wire cross-section/gauge per terminal: One core: 0.2 .. 2.5 mm ² (24 .. 14 AWG) Two cores: 0.2 to 1.5 mm ² (24 .. 16 AWG) Three cores: Not permitted Use solid or stranded wires (twisted or with ferrule). For distances longer than 3.05 meters (10 feet), use class 2 cables	
Power	1 x Green pluggable terminal block (3 poles) 12 to 36 VDC +/-10%, Max.: 250 mA 24 VAC +/-10% 50-60 Hz, Max.: 127 mA Recommended: 24 VDC	
Ethernet	Use this connector for the AC central control network to the gateway connection 1 x Ethernet 10/100 Mbps RJ45	
Port EIA 485	1 x Green pluggable terminal block (3 poles) SGND (Reference ground or shield) 1500VDC isolation from other ports	
Port KNX	1 x Orange pluggable terminal block (2 poles): A, B	
AC Ports	AC-Port A (serial, 2 poles): Not used AC-Port B (serial, 3 poles): Not used AC-Port C: (serial, 3 poles): Not used	
LEDs	2 x Run (Power/Error) 2 x Port EIA-485 TX/RX 2 x Port KNX TX/TR 1 x Button indicator	2 x Ethernet Link/Speed 2 x AC-Port A TX/RX 2 x AC-Port B TX/RX 2 x AC-Port C TX/RX
Binary inputs	1 x Green pluggable terminal block (4 poles) I1, I2, I3, and Common 1500 VDC isolation from other ports	
Console port	USB Mini-B type 2.0 compliant 1500 VDC isolation	
SW A SW B	2 x DIP switch blocks for EIA-485 serial port configuration: Position 1: On: 120 Ω termination active Off: 120 Ω termination inactive Position 2 and 3: On: Polarization active Off: Polarization inactive	
Push button	1 x Push button Factory reset Normal mode/programming mode switch (for KNX only)	
Operational temperature	Celsius: 0 .. 60°C Fahrenheit: 32 .. 140°F	
Operational humidity	5 to 95%. No condensation	
Protection	IP20 (IEC60529)	

5.9. Dimensions

- **Net dimensions (DxWxH)**


Millimeters: 90 x 106 x 58 mm

Inches: 3.5 x 4.2 x 2.3"



IMPORTANT

Leave enough clear space to wire the gateway easily and for the subsequent manipulation of elements such as connectors, DIP switches, etc.

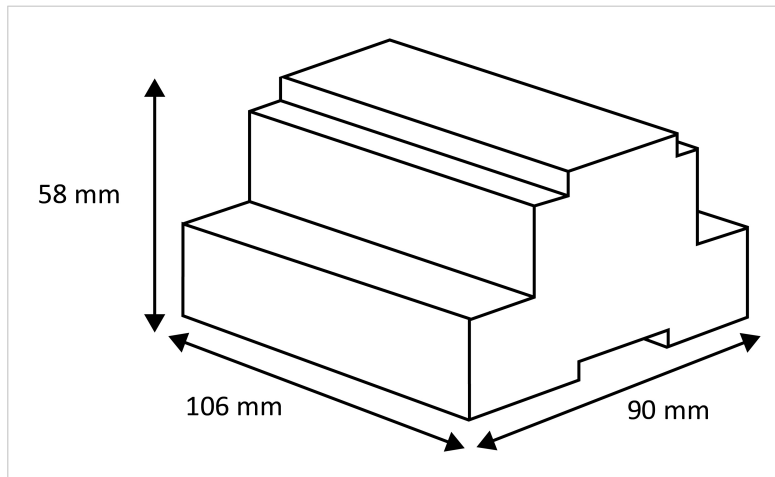

6. Available Applications

6.1. Integration into Modbus Systems

6.1.1. Modbus Registers



NOTICE

This part is common for Modbus RTU and TCP.

Functions to read Modbus registers:

- 03 Read Holding Registers.
- 04 Read Input Registers.

Function to write Modbus registers:

- 06 Single Holding Registers.

Modbus register contents are expressed in most significant bit (MSB) .. less significant bit (LSB).

The following tables list all available Modbus registers for the gateway.



NOTICE

Read/write parameter terminology:

- **R**: Read-only register.
- **W**: Write-only register.
- **RW**: Read and write register.

Table 2. Global signals

Register name	Possible values	Modbus address formula	W/R
Centralized controller communication error	0: Ok 1: Communication error	$((CTRL\#-1)*30)+0$	R
Reset errors for all the groups	1: Reset errors	$((CTRL\#-1)*30)+1$	W
On (all the groups)	1: Set the groups On	$((CTRL\#-1)*30)+2$	W
Off (all the groups)	1: Set the groups Off	$((CTRL\#-1)*30)+3$	W
Operation Mode Auto (all the IC groups)	1: Set Auto Mode	$((CTRL\#-1)*30)+4$	W
Operation Mode Heat (all the IC groups)	1: Set Heat Mode	$((CTRL\#-1)*30)+5$	W
Operation Mode Dry (all the IC groups)	1: Set Dry Mode	$((CTRL\#-1)*30)+6$	W
Operation Mode Fan (all the IC groups)	1: Set Fan Mode	$((CTRL\#-1)*30)+7$	W
Operation Mode Cool (all the IC groups)	1: Set Cool Mode	$((CTRL\#-1)*30)+8$	W
Operation Mode Setback (all the IC groups)	1: Set Setback Mode	$((CTRL\#-1)*30)+9$	W
Operation Mode LC_Auto (all the LOSSNAY groups)	1: Set LC_Auto Mode	$((CTRL\#-1)*30)+10$	W
Operation Mode Heat Recovery (all the LOSSNAY groups)	1: Set Heat Recovery Mode	$((CTRL\#-1)*30)+11$	W
Operation Mode Bypass (all the LOSSNAY groups)	1: Set Bypass Mode	$((CTRL\#-1)*30)+12$	W
Fan Speed (all the IC groups)	1: Set Fan Speed Auto	$((CTRL\#-1)*30)+13$	W
Fan Speed (all the IC groups)	1: Set Fan Speed Low	$((CTRL\#-1)*30)+14$	W

Register name	Possible values	Modbus address formula	W/R
Fan Speed (all the IC groups)	1: Set Fan Speed Mid-1	$((CTRL\#-1)*30)+15$	W
Fan Speed (all the IC groups)	1: Set Fan Speed Mid-2	$((CTRL\#-1)*30)+16$	W
Fan Speed (all the IC groups)	1: Set Fan Speed High	$((CTRL\#-1)*30)+17$	W
Fan Speed (all the LOSSNAY groups)	1: Set Fan Speed Low	$((CTRL\#-1)*30)+18$	W
Fan Speed (all the LOSSNAY groups)	1: Set Fan Speed Mid-1	$((CTRL\#-1)*30)+28$	W
Fan Speed (all the LOSSNAY groups)	1: Set Fan Speed Mid-2	$((CTRL\#-1)*30)+29$	W
Fan Speed (all the LOSSNAY groups)	1: Set Fan Speed High	$((CTRL\#-1)*30)+19$	W
Vane position (all the IC groups)	1: Set Vanes Auto	$((CTRL\#-1)*30)+20$	W
Vane position (all the IC groups)	1: Set Vanes Horizontal	$((CTRL\#-1)*30)+21$	W
Vane position (all the IC groups)	1: Set Vanes Position-2	$((CTRL\#-1)*30)+22$	W
Vane position (all the IC groups)	1: Set Vanes Position-3	$((CTRL\#-1)*30)+23$	W
Vane position (all the IC groups)	1: Set Vanes Position-4	$((CTRL\#-1)*30)+24$	W
Vane position (all the IC groups)	1: Set Vanes Vertical	$((CTRL\#-1)*30)+25$	W
Vane position (all the IC groups)	1: Set Vanes Swing	$((CTRL\#-1)*30)+26$	W
Individual Temperature Setpoint (°C) (all the groups)	Celsius: 5 .. 90°C Fahrenheit: 41 .. 194°F	$((CTRL\#-1)*30)+27$	W

Table 3. Individual group signals

Register name	Possible values	Modbus address formula	R/W
On/Off	0: Off 1: On	$((CTRL\#-1)*50)+Group\#*100)+0$	R, W
Operation Mode IC	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool 5: Auto Heat 6: Auto Cool 7: Setback 8: Setbackheat 9: Setbackcool	$((CTRL\#-1)*50)+Group\#*100)+1$	R, W
Operation Mode LOSSNAY	0: LC_Auto 1: Heat Recovery 2: Bypass	$((CTRL\#-1)*50)+Group\#*100)+1$	R, W
Operation Mode ATW & HWHP	0: Hot_Water 1: Heating 2: Heating_Eco 3: Anti_Freeze 4: Cooling	$((CTRL\#-1)*50)+Group\#*100)+1$	R, W
Fan Speed IC	0: Auto 1: Low 2: Middle 2 3: Middle 1 4: High	$((CTRL\#-1)*50)+Group\#*100)+2$	R, W
Fan Speed LOSSNAY	1: Low 2: Middle 2 3: Middle 1 4: High	$((CTRL\#-1)*50)+Group\#*100)+2$	R, W

Register name	Possible values	Modbus address formula	R/W
Vane position	0: Auto 1: Horizontal 2: Position 2 3: Position 3 4: Position 4 5: Vertical 6: Swing	$((CTRL\#-1)*50)+Group\#*100)+3$	R, W
Temperature Setpoint (°C)	Cool or dry: 19 .. 30°C / 66 .. 86°F Heat or Auto: 17 .. 28°C / 63 .. 82°F	$((CTRL\#-1)*50)+Group\#*100)+4$	R, W
Temperature Setpoint (°C)	Celsius: 5 .. 90°C Fahrenheit: 41 .. 194°F	$((CTRL\#-1)*50)+Group\#*100)+4$	R, W
Ambient Temperature (°C/x10°C)	0.0 .. 99.9	$((CTRL\#-1)*50)+Group\#*100)+5$	R
Operational Status for Lossnay or OA	0: Off 1: Low 2: High	$((CTRL\#-1)*50)+Group\#*100)+6$	R, W
Group operation time (x100 hours)	0 .. 9999	$((CTRL\#-1)*50)+Group\#*100)+7$	R
Group operation time (%100 hours)	0 .. 99	$((CTRL\#-1)*50)+Group\#*100)+8$	R
Group error status	0: No error 1: Group error	$((CTRL\#-1)*50)+Group\#*100)+9$	R
Group error code	Number of the error code (XXXX)	$((CTRL\#-1)*50)+Group\#*100)+10$	R
Group error reset	1: Reset the error	$((CTRL\#-1)*50)+Group\#*100)+11$	W
Group model	Model of units connected to group	$((CTRL\#-1)*50)+Group\#*100)+12$	R
Allow ON/OFF control from the local panel	0: Allow 1: Not allow	$((CTRL\#-1)*50)+Group\#*100)+13$	R, W
Allow operation mode control from the local panel	0: Allow 1: Not allow	$((CTRL\#-1)*50)+Group\#*100)+14$	R, W
Allow set point control from the local panel	0: Allow 1: Not allow	$((CTRL\#-1)*50)+Group\#*100)+15$	R, W
Allow filter reset control from the local panel	0: Allow 1: Not allow	$((CTRL\#-1)*50)+Group\#*100)+16$	R, W
Allow air direction control from the local panel	0: Allow 1: Not allow	$((CTRL\#-1)*50)+Group\#*100)+17$	R, W
Allow fan speed control from the local panel	0: Allow 1: Not allow	$((CTRL\#-1)*50)+Group\#*100)+18$	R, W
Allow timer control from the local panel	0: Allow 1: Not allow	$((CTRL\#-1)*50)+Group\#*100)+19$	R, W
Setback control	0: Disable 1: Enable	$((CTRL\#-1)*50)+Group\#*100)+20$	R, W
Minimum cool setpoint restriction	Celsius: 4.5 .. 35°C Fahrenheit: 40 .. 95°F	$((CTRL\#-1)*50)+Group\#*100)+21$	R, W
Maximum cool setpoint restriction	Celsius: 4.5 .. 35°C Fahrenheit: 40 .. 95°F	$((CTRL\#-1)*50)+Group\#*100)+22$	R, W
Minimum heat setpoint restriction	Celsius: 4.5 .. 35°C Fahrenheit: 40 .. 95°F	$((CTRL\#-1)*50)+Group\#*100)+23$	R, W
Maximum heat setpoint restriction	Celsius: 4.5 .. 35°C Fahrenheit: 40 .. 95°F	$((CTRL\#-1)*50)+Group\#*100)+24$	R, W
Minimum auto setpoint restriction	Celsius: 4.5 .. 35°C Fahrenheit: 40 .. 95°F	$((CTRL\#-1)*50)+Group\#*100)+25$	R, W
Maximum auto setpoint restriction	Celsius: 4.5 .. 35°C Fahrenheit: 40 .. 95°F	$((CTRL\#-1)*50)+Group\#*100)+26$	R, W

Register name	Possible values	Modbus address formula	R/W
Cool/dry/auto(upper) dual temperature setpoint (x10°C)	Celsius: 4.5 .. 35°C Fahrenheit: 40 .. 95°F	(((CTRL#-1)*50)+Group#*100)+27	R, W
Heating ATW & HWHP temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+27	R, W
Heat/auto(lower) dual temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+28	R, W
Heating ECO ATW temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+28	R, W
Auto single temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+29	R, W
Hot water ATW & HWHP temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+29	R, W
Setback upper temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+30	R, W
Anti-Freeze ATW temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+30	R, W
Setback lower temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+31	R, W
Cooling ATW temperature setpoint (x10°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	(((CTRL#-1)*50)+Group#*100)+31	R, W
Room Humidity	0 .. 100%	(((CTRL#-1)*50)+Group#*100)+32	R
Brightness status	0: Dark 1: Bright	(((CTRL#-1)*50)+Group#*100)+33	R
Occupancy	0: Absence 1: Occupancy	(((CTRL#-1)*50)+Group#*100)+34	R
Outdoor temperature	0.0 .. 99.9	(((CTRL#-1)*50)+Group#*100)+35	R
Filter status	0: Ok 1: Dirty	(((CTRL#-1)*50)+Group#*100)+36	R
Dirty filter indication reset	1: Reset the filter	(((CTRL#-1)*50)+Group#*100)+37	W
Consumption Yesterday	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+38	R
Consumption Today	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+40	R
Consumption Total	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+42	R
Consumption Yesterday Heat	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+44	R
Consumption Today Heat	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+46	R
Consumption Total Heat	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+48	R
Consumption Yesterday Cool	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+50	R
Consumption Today Cool	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+52	R
Consumption Total Cool	Wh/kWh	(((CTRL#-1)*50)+Group#*100)+54	R

6.2. Integration into KNX Systems

6.2.1. KNX signals



IMPORTANT

The signals available depend on the gateway configuration and/or the unit type (AC indoor unit, Air-to-water booster unit, heat pump, etc.)

Table 4. Global group signals

Description	Object function	DPT	Flags
Centralized controller communication error	0: Ok 1: Communication error	DPT_Alarm (1bit)	R, T
Reset errors for all the groups	1: Reset the errors	DPT_Reset (1bit)	W
On/Off (all the groups)	0: Off 1: On	DPT_Switch (1bit)	W
Operation Mode (all the IC groups)	0: Auto 1: Heat 3: Cool 9: Fan 14: Dry	DPT_HVACContrMode (1byte)	W
Operation Mode (all the IC groups)	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool 5: Setback	DPT_Enumerated (1byte)	W
Operation Mode (all the IC groups)	0: Cool 1: Dry 2: Fan 3: Heat 4: Auto 5: Setback	DPT_Enumerated (1byte)	W
Operation Mode (all the LOSSNAY groups)	0: LC_Auto 1: Heat Recovery 2: Bypass	DPT_Enumerated (1byte)	W
Operation Mode (all the ATW & HWHP groups)	0: Hot Water 1: Heating 2: Heating_Eco 3: Anti_Freeze 4: Cooling	DPT_Enumerated (1byte)	W
Fan Speed (all the IC groups)	1: Speed 1 2: Speed 2 3: Speed 3 4: Speed 4	DPT_Enumerated (1byte)	W
Fan Speed (all the LOSSNAY groups)	1: Speed 1 2: Speed 2 3: Speed 3 4: Speed 4	DPT_Enumerated (1byte)	W
Fan Speed AUTO (all the IC groups)	1: Set auto fan 0: Stop auto fan	DPT_Switch (1bit)	W

Description	Object function	DPT	Flags
Vane position (all the groups)	1: Horizontal 2: Position-2 3: Position-3 4: Position-4 5: Vertical	DPT_Enumerated (1byte)	W
Vane position AUTO (all the groups)	1: Set auto vane 0: Stop auto vane	DPT_Switch (1bit)	W
Vane position Swing (all the groups)	1: Set swing vane 0: Stop swing vane	DPT_Switch (1bit)	W
Individual Temperature Setpoint (°C) (all the groups)	Celsius: 5 .. 90°C Fahrenheit: 41 .. 194°F	DPT_Value_Temp (2byte)	W

Table 5. Individual group signals

Description	Object function	DPT	Flags
Control_On/Off	0: Off 1: On	DPT_Switch (1bit)	W
Status_On/Off	0: Off 1: On	DPT_Switch (1bit)	R, T
Control_Operation mode IC	0: Auto 1: Heat 3: Cool 9: Fan 14: Dry	DPT_HVACContrMode (1byte)	W
Status_Operation mode IC	0: Auto 1: Heat 3: Cool 9: Fan 14: Dry	DPT_HVACContrMode (1byte)	R, T
Control_Operation mode IC	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool 5: Setback	DPT_Enumerated (1byte)	W
Status_Operation mode IC	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool 5: Setback	DPT_Enumerated (1byte)	R, T
Control_Operation mode IC	0: Cool 1: Dry 2: Fan 3: Heat, 4: Auto 5: Setback	DPT_Enumerated (1byte)	W

Description	Object function	DPT	Flags
Status_Operation mode IC	0: Cool 1: Dry 2: Fan 3: Heat, 4: Auto 5: Setback	DPT_Enumerated (1byte)	R, T
Control_Mode Cool/Heat IC	0: Cool 1: Heat	DPT_Heat/Cool (1bit)	W
Status_Mode Cool/Heat IC	0: Cool 1: Heat	DPT_Heat/Cool (1bit)	R, T
Control_Heat mode&ON IC	0 %:Off 1 .. 100 %: On+Heat	DPT_Scaling (1byte)	W
Control_Cool mode&ON IC	0 %: Off 1 .. 100 %: On+Cool	DPT_Scaling (1byte)	W
Control_Auto mode IC	1: Set auto mode	DPT_Switch (1bit)	W
Status_Auto mode IC	1: Auto mode active 0: Auto mode not active	DPT_Switch (1bit)	R, T
Control_Heat mode IC	1: Set heat mode	DPT_Switch (1bit)	W
Status_Heat mode IC	1: Heat mode active 0: Heat mode not active	DPT_Switch (1bit)	R, T
Control_Cool mode IC	1: Set cool mode	DPT_Switch (1bit)	W
Status_Cool mode IC	1: Cool mode active 0: Cool mode not active	DPT_Switch (1bit)	R, T
Control_Fan mode IC	1: Set fan mode	DPT_Switch (1bit)	W
Status_Fan mode IC	1: Fan mode active 0: Fan mode not active	DPT_Switch (1bit)	R, T
Control_Dry mode IC	1: Set dry mode	DPT_Switch (1bit)	W
Status_Dry mode IC	1: Dry mode active, 0: Dry mode not active	DPT_Switch (1bit)	R, T
Status_Auto heat mode IC	1: Auto heat mode active 0: Auto heat mode not active	DPT_Switch (1bit)	R, T
Status_Auto cool mode IC	1: Auto cool mode active 0: Auto cool mode not active	DPT_Switch (1bit)	R, T
Control_Setback mode IC	1: Set setback mode	DPT_Switch (1bit)	W
Status_Setback mode IC	1: Setback mode active, 0: Setback mode not active	DPT_Switch (1bit)	R, T
Status_Setbackheat mode IC	1: Setbackheat mode active 0: Setbackheat mode not active	DPT_Switch (1bit)	R, T
Status_Setbackcool mode IC	1: Setbackcool mode active 0: Setbackcool mode not active	DPT_Switch (1bit)	R, T
Control_Operation mode LOSSNAY	0: LC_Auto 1: Heat Recovery 2: Bypass	DPT_Enumerated (1byte)	W
Status_Operation mode LOSSNAY	0: LC_Auto 1: Heat Recovery 2: Bypass	DPT_Enumerated (1byte)	R, T
Control_LC_auto mode LOSSNAY	1: Set LC_auto mode	DPT_Switch (1bit)	W
Status_LC_auto mode LOSSNAY	1: LC_auto mode active 0: LC_auto mode not active	DPT_Switch (1bit)	R, T
Control_Heat recovery mode LOSSNAY	1: Set heat recovery mode	DPT_Switch (1bit)	W

Description	Object function	DPT	Flags
Status_Heat recovery mode LOSSNAY	1: Heat recovery mode active 0: Heat recovery mode not active	DPT_Switch (1bit)	R, T
Control_Bypass mode LOSSNAY	1: Set bypass mode	DPT_Switch (1bit)	W
Status_Bypass mode LOSSNAY	1: Bypass mode active 0: Bypass mode not active	DPT_Switch (1bit)	R, T
Control_Operation mode ATW & HWHP	0: Hot Water 1: Heating 2: Heating_Eco 3: Anti_Freeze 4: Cooling	DPT_Enumerated (1byte)	W
Status_Operation mode ATW & HWHP	0: Hot Water 1: Heating 2: Heating_Eco 3: Anti_Freeze 4: Cooling	DPT_Enumerated (1byte)	R, T
Control_Hot water mode ATW & HWHP	1: Set hot water mode	DPT_Switch (1bit)	W
Status_Hot water mode ATW & HWHP	1: Hot water mode active 0: Hot water mode not active	DPT_Switch (1bit)	R, T
Control_Heating mode ATW & HWHP	1: Set heating mode	DPT_Switch (1bit)	W
Status_Heating mode ATW & HWHP	1: Heating mode active 0: Heating mode not active	DPT_Switch (1bit)	R, T
Control_Cooling mode ATW & HWHP	1: Set cooling mode	DPT_Switch (1bit)	W
Status_Cooling mode ATW & HWHP	1: Cooling mode active 0: Cooling mode not active	DPT_Switch (1bit)	R, T
Control_Heating_Eco mode ATW & HWHP	1: Set heating_eco mode	DPT_Switch (1bit)	W
Status_Heating_Eco mode ATW & HWHP	1: Heating_Eco mode active 0: Heating_Eco mode not active	DPT_Switch (1bit)	R, T
Control_Anti_Freeze mode ATW & HWHP	1: Set anti_freeze mode	DPT_Switch (1bit)	W
Status_Anti_Freeze mode ATW & HWHP	1: Anti_Freeze mode active 0: Anti_Freeze mode not active	DPT_Switch (1bit)	R, T
Control_Fan Speed enumerated (4stages)	1: Speed 1 2: Speed 2 3: Speed 3 4: Speed 4	DPT_Enumerated (1byte)	W
Status_Fan Speed enumerated (4stages)	1: Speed 1 2: Speed 2 3: Speed 3 4: Speed 4	DPT_Enumerated (1byte)	R, T
Control_Fan Speed enumerated (3stages)	1: Speed 1 2: Speed 2 3: Speed 3	DPT_Enumerated (1byte)	W
Status_Fan Speed enumerated (3stages)	1: Speed 1, 2: Speed 2 3: Speed 3	DPT_Enumerated (1byte)	R, T
Control_Fan Speed enumerated (2stages)	1: Speed 1 2: Speed 2	DPT_Enumerated (1byte)	W
Status_Fan Speed enumerated (2stages)	1: Speed 1 2: Speed 2	DPT_Enumerated (1byte)	R, T

Description	Object function	DPT	Flags
Control_Fan Speed scaling (4stages)	Thersholds: 0 .. 37 % 38 .. 62 % 63 .. 87 % 88 .. 100 %	DPT_Scaling (1byte)	W
Status_Fan Speed scaling (4stages)	Thersholds: 25 % 50 % 75 % 100 %	DPT_Scaling (1byte)	R, T
Control_Fan Speed scaling (3stages)	Thersholds: 0 .. 49 % 50 .. 82 % 83 .. 100 %	DPT_Scaling (1byte)	W
Status_Fan Speed scaling (3stages)	Thersholds: 33 % 67 % 100 %	DPT_Scaling (1byte)	R, T
Control_Fan Speed scaling (2stages)	Thersholds: 0 .. 74 % 75 .. 100 %	DPT_Scaling (1byte)	W
Status_Fan Speed scaling (2stages)	Thersholds: 50 % 100 %	DPT_Scaling (1byte)	R, T
Control_Fan speed 1	1: Set fan speed 1	DPT_Switch (1bit)	W
Status_Fan speed 1	1: Speed 1 active 0: Speed 1 not active	DPT_Switch (1bit)	R, T
Control_Fan speed 2	1: Set fan speed 2	DPT_Switch (1bit)	W
Status_Fan speed 2	1: Speed 2 active 0: Speed 2 not active	DPT_Switch (1bit)	R, T
Control_Fan speed 3	1: Set fan speed 3	DPT_Switch (1bit)	W
Status_Fan speed 3	1: Speed 3 active 0: Speed 3 not active	DPT_Switch (1bit)	R, T
Control_Fan speed 4	1: Set fan speed 4	DPT_Switch (1bit)	W
Status_Fan speed 4	1: Speed 4 activ 0: Speed 4 not active	DPT_Switch (1bit)	R, T
Control_Fan speed Man/Auto	0: Manual 1: Auto	DPT_Bool (1bit)	W
Status_Fan speed Man/Auto	0: Manual 1: Auto	DPT_Bool (1bit)	R, T
Control_Vane position enumerated	1: Horizontal 2: Position-2 3: Position-3 4: Position-4 5: Vertical	DPT_Enumerated (1byte)	W
Status_Vane position enumerated	1: Horizontal 2: Position-2, 3: Position-3 4: Position-4, 5: Vertical	DPT_Enumerated (1byte)	R, T

Description	Object function	DPT	Flags
Control_Vane position scaling	Thresholds: 0 .. 30 % 31 .. 50 % 51 .. 70 % 71 .. 90 % 91 .. 100 %	DPT_Scaling (1byte)	W
Status_Vane position scaling	Thresholds: 20 % 40 % 60 % 80 % 100 %	DPT_Scaling (1byte)	R, T
Control_Vane position auto	1: Set auto vane 0: Stop auto vane	DPT_Switch (1bit)	W
Status_Vane position auto	1: Vane auto active 0: Vane auto not active	DPT_Switch (1bit)	R, T
Control_Vane position horizontal	1: Set horizontal vane	DPT_Switch (1bit)	W
Status_Vane position horizontal	1: Vane horizontal active 0: Vane horizontal not active	DPT_Switch (1bit)	R, T
Control_Vane position-2	1: Set position-2 vane	DPT_Switch (1bit)	W
Status_Vane position-2	1: Vane position-2 active 0: Vane position-2 not active	DPT_Switch (1bit)	R, T
Control_Vane position-3	1: Set position-3 vane	DPT_Switch (1bit)	W
Status_Vane position-3	1: Vane position-3 active 0: Vane position-3 not active	DPT_Switch (1bit)	R, T
Control_Vane position-4	1: Set position-4 vane	DPT_Switch (1bit)	W
Status_Vane position-4	1: Vane position-4 active 0: Vane position-4 not active	DPT_Switch (1bit)	R, T
Control_Vane position vertical	1: Set vertical vane	DPT_Switch (1bit)	W
Status_Vane position vertical	1: Vane vertical active 0: Vane vertical not active	DPT_Switch (1bit)	R, T
Control_Vane position swing	1: Set swing vane 0: Stop swing vane	DPT_Switch (1bit)	W
Status_Vane position swing	1: Vane swing active 0: Vane swing not active	DPT_Switch (1bit)	R, T
Control_Temperature Setpoint	Cool or dry: 19 .. 30°C / 66 .. 86°F Heat or Auto: 17 .. 28°C / 63 .. 82°F	DPT_Value_Temp (2byte)	W
Status_Temperature Setpoint	Cool or dry: 19 .. 30°C / 66 .. 86°F Heat or Auto: 17 .. 28°C / 63 .. 82°F	DPT_Value_Temp (2byte)	R, T
Control_Temperature Setpoint	Celsius: 5 .. 90°C Fahrenheit: 41 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Temperature Setpoint	Celsius: 5 .. 90°C Fahrenheit: 41 .. 194°F	DPT_Value_Temp (2byte)	R, T
Status_AC Ambient Temperature	Celsius: 0.0 .. 99.9°C Fahrenheit: 32 .. 212°F	DPT_Value_Temp (2byte)	R, T
Control_KNX ambient Temperature	Celsius: 0.0 .. 99.9°C Fahrenheit: 32 .. 212°F	DPT_Value_Temp (2byte)	W
Control_Operational Status for Lossnay or OA	0: Off 1: Low 2: High	DPT_Enumerated (1byte)	W

Description	Object function	DPT	Flags
Status_Operational Status for Lossnay or OA	0: Off 1: Low 2: High	DPT_Enumerated (1byte)	R, T
Control_On/Off control disablement	0: Enabled 1: Disabled	DPT_Enable (1bit)	W
Status_On/Off control disablement	0: Enabled 1: Disabled	DPT_Enable (1bit)	R, T
Control_operating mode control disablement	0: Enabled 1: Disabled	DPT_Enable (1bit)	W
Status_operating mode control disablement	0: Enabled 1: Disabled	DPT_Enable (1bit)	R, T
Control_set point control disablement	0: Enabled 1: Disabled	DPT_Enable (1bit)	W
Status_set point control disablement	0: Enabled 1: Disabled	DPT_Enable (1bit)	R, T
Control_filter reset control disablement	0: Enabled 1: Disabled	DPT_Enable (1bit)	W
Status_filter reset control disablement	0: Enabled 1: Disabled	DPT_Enable (1bit)	R, T
Status_Group operation time (secs)	0 .. 9999999999	DPT_LongDeltaTimeSec (4bytes)	R, T
Status_group error	0: No error 1: Group error	DPT_Alarm (1bit)	R, T
Status_group error code	Number of the error code (XXXX)	8.x: (2byte, Signed Value)	R, T
Control_group error reset	1: Reset the error	DPT_Switch (1bit)	W
Status_group model	0: IC 1: KIC 2: AIC 3: LC 4: FU 5: BU 6: WH 7: CEh	DPT_String_ASCII (14 bytes)	R, T
Control_Setback	1: Enable 0: Disable	DPT_Enable (1bit)	W
Status_Setback	1: Enable 0: Disable	DPT_Enable (1bit)	R, T
Control_Cool/dry/auto(upper) dual temperature setpoint (°C)	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Cool/dry/auto(upper) dual temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Heating ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Heating ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Heat/auto(lower) dual temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Heat/auto(lower) dual temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Heating ECO ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W

Description	Object function	DPT	Flags
Status_Heating ECO ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Auto single temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Auto single temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Hot water ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Hot water ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Setback upper temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Setback upper temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Anti-Freeze ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Anti-Freeze ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Setback lower temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Setback lower temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Control_Cooling ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	W
Status_Cooling ATW temperature setpoint	Celsius: 4.5 .. 90°C Fahrenheit: 40 .. 194°F	DPT_Value_Temp (2byte)	R, T
Status_Outdoor temperature	Celsius: 0.0 .. 99.9°C Fahrenheit: 32 .. 212°F	DPT_Value_Temp (2byte)	R, T
Status_Filter	0: Ok 1: Dirty	DPT_Alarm (1bit)	R, T
Control_Dirty filter indication reset	1: Reset the filter	DPT_Reset (1bit)	W
Status_Consumption Yesterday	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T
Status_Consumption Today	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T
Status_Consumption Total	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T
Status_Consumption Yesterday Heat	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T
Status_Consumption Today Heat	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T
Status_Consumption Total Heat	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T
Status_Consumption Yesterday Cool	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T
Status_Consumption Today Cool	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T
Status_Consumption Total Cool	Wh/KWh	13.010 active energy (Wh) (4byte)	R, T

**NOTE**

The default unit for the consumption signals is Wh, but you can set it in KWh instead. If so, the DPT number changes from 13.010 to 13.013.

Table 6. Individual error code signals for indoor and outdoor units

Controller	Unit	Description	Value	DPT	Flags
Controller 1 .. 2	Indoor Unit 1 .. 50	Status_Indoor Unit n error code	Number of the error code (XXXX)	DPT_7.N (2byte)	R, T
Controller 1 .. 2	Outdoor Unit 1 .. 50	Status_Outdoor Unit n error code	Number of the error code (XXXX)	DPT_7.N (2byte)	R, T

6.3. Integration into Home Automation Systems

6.3.1. Home Automation Signals

The following tables list all available Home Automation signals for this gateway.



NOTE

- **SET**: Command used to control the indoor unit. It is sent by the client.
- **CHN**: Command used to get notifications of changes in the status of a specific function of the gateway. It is sent spontaneously by the gateway itself.
- **GET**: Command used to get the status of a specific function. It is sent by the client.

To know more about the Home Automation protocol, see the [Protocol Specifications Manual](#).

Table 7. Indoor units signals

Name	Possible values	acNum ¹	Commands supported
On/Off	ON OFF	See the note below	SET/CHN/GET
Operation Mode	HEAT COOL FAN DRY AUTO		SET/CHN/GET
Fan Speed	1 2 3 4 5 AUTO		SET/CHN/GET
Vane Position	1 2 3 4 5 AUTO		SET/CHN/GET
Temperature Setpoint (x10)	°C / °F		SET/CHN/GET
AC Ambient Temperature (x10)	°C / °F		CHN/GET
Group Error code	0: No Error X: Error		CHN/GET
Group error	OK ERR		CHN/GET



NOTE

¹ This index must be set according to the Unit ID Index.

For outdoor units, the acNum value must be the same as the minimum indoor unit associated in the CONFIGURATION section.

7. Late Configuration: Change the Gateway's Protocol

Reconfiguring the gateway with a different protocol is very easy:

1. Connect the gateway to the PC and open the configuration tool Intesis MAPS.
2. Select the new template you need.
3. Click **Next** or double-click the template in the list.
4. A message will pop up, asking if you want to save the project currently loaded in the gateway.
5. Click **Yes** or **No**, depending on your needs.
6. Configure the needed parameters and signals for your new project.
7. Send the configuration to the gateway.



NOTE

For a complete gateway configuration guide, please refer to the Intesis MAPS Configuration Guide.

8. Error Codes



NOTE

These error codes are the same for all applications.

Error Code	Description
65535 (-1)	Communication error between the gateway and the AC unit
0	No active error
1102	Discharge temperature high
1108	Internal thermostat detector working (49C)
1110	Outdoor unit failure
1300	Low pressure
1302	High pressure (High pressure probe working 63H)
1503	Protection against freeze or battery high temperature
1504	Protection against freeze or battery high temperature
1504	Overheating protection
1509	High pressure error (ball valve closed)
1520	Super heating anomaly due to low temp. of discharge (TH4)
2500	Erroneous operation of the drain pump
2502	Erroneous operation of the drain pump
2503	Drain sensor anomaly (DS)
4030	Serial transmission error
4100	Compressor pause due to excess of current (initial block)
4101	Compressor pause due to excess of current (overload)
4102	Phase detection opened
4103	Anti-phase detection
4108	Phase opened in phase L2 or connector 51CM opened
4118	Error in the anti-phase detector (electronic board)
4124	Connector 49L opened
4210	Cut due to over-current of compressor
4220	Voltage anomaly
4230	Radiator panel temperature anomaly (TH8)
5101	Ambient temperature probe anomaly (TH1), indoor unit
5102	Liquid probe anomaly (TH2)
5102	Condensation/Evaporation probe anomaly (TH5)
5104	Error detection in discharge temperature
5105	Outdoor probe error TH3
5106	Outdoor probe error TH7
5107	Outdoor probe error TH6
5110	Outdoor probe error TH8
5202	Connector 63L opened
5300	Current probe error
6600	M-NET duplicated address definition
6602	M-NET line transmission hardware error
6603	M-NET bus busy
6606	M-NET line transmission error
6607	M-NET transmission error
6607	M-NET without ack

6608	M-NET transmission error
6608	M-NET without response
6831	Remote controller transmission error (reception error)
6832	Remote controller transmission error (transmission error)
6840	Transmission error with the indoor/outdoor unit (reception error)
6841	Transmission error with the indoor/outdoor unit (transmission error)
6844	Error in the inter-connection cable in the indoor/outdoor unit, indoor unit number deactivated (5 min or more)
6845	Error in the inter-connection cable in the indoor/outdoor unit (cabling error, disconnection)
6846	Initial timer deactivated

**IMPORTANT**

These error codes may differ depending on the specific AC unit model.

**NOTE**

If you detect a non-listed error code, please contact Mitsubishi Electric technical support.